

 
## Quick Guide for imx508 Flashing Tool (M92)

1. Copy content of the RAR file on your PC (XP would be the best OS for it)

The directory name of this tool would be:

\\Mfgtools-Rel-11.10.19\_ER\_MX50\_UPDATER\.

2. Start "MfgTool.exe"

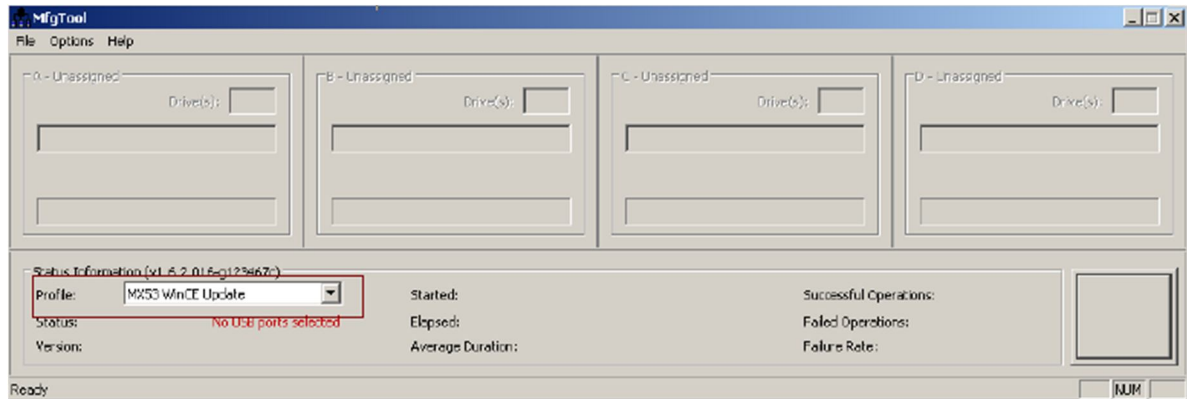


3. Select the target profile.
4. Power OFF your "M92"
5. Connect your device to PC (with the running MFG Tool) by USB.

Hold the "VOLUME- (minus)" button and at the same time start the device.

Note: the LED does not light blue and the screen will not be changed, but your PC should signal that an USB device has been connected to it. Afterwards you can remove the short circuit help.


Device is in service mode now.

 In the MFG tool select USB ports (Menu Options -> Configuration->USB Ports)

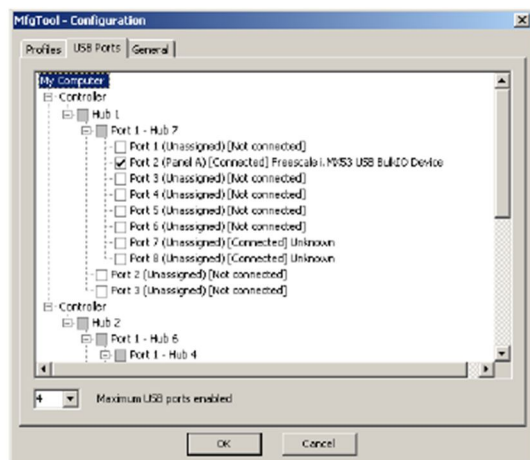

Select the one with messages "[Connected] HID compliant device"!

 Start the flashing process by click "Start" button:

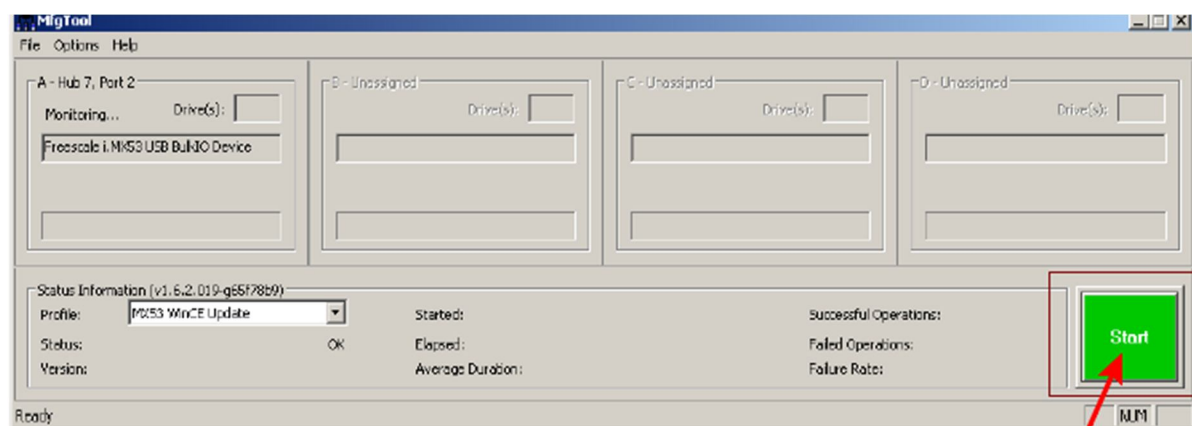

Check the status box for the status message. When it shows "Operation completes". Then you can finish the flashing by clicking "Stop" button:

